

Wash & Carry

Manuale di istruzioni Manual user




MADE IN ITALY







SCHEDA TECNICA / MEASUREMENT SHEET

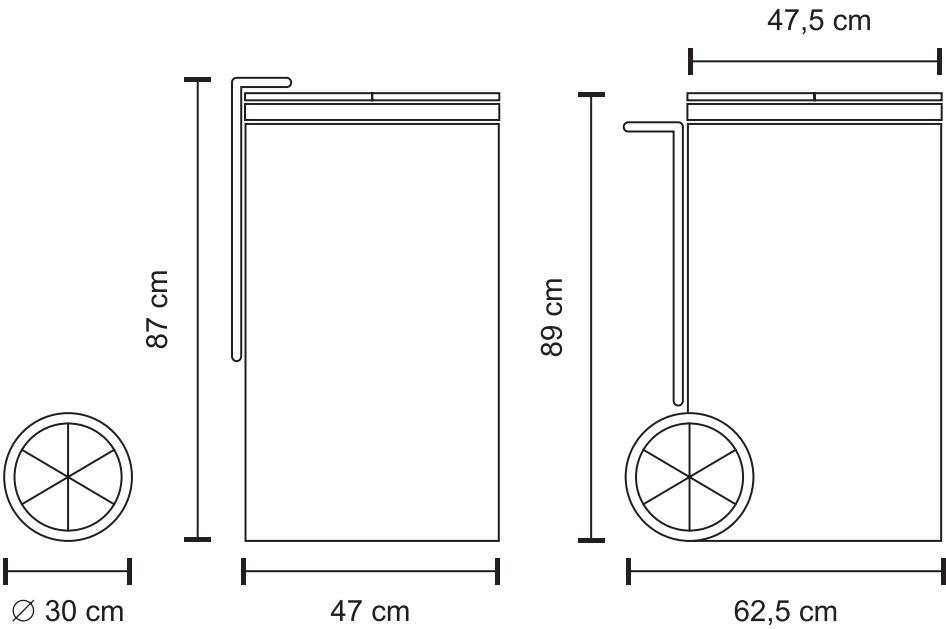


TANICHE / TANKS

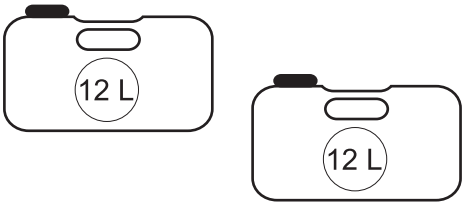

SCHEDA TECNICA / MEASUREMENT SHEET

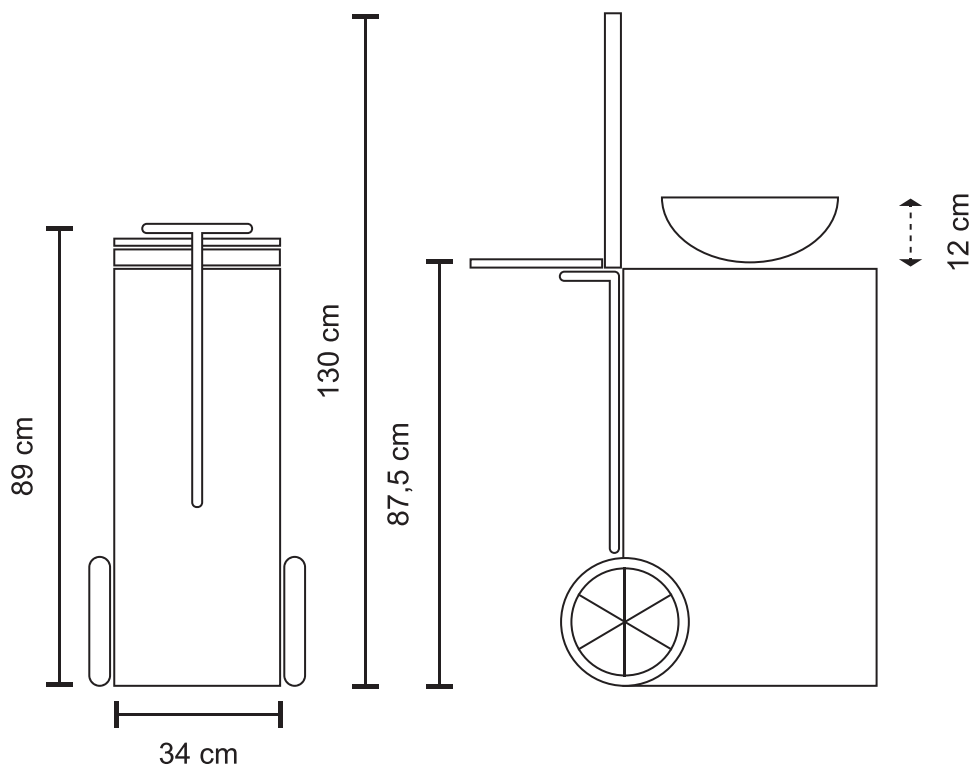

SPECCHI / MIRRORS

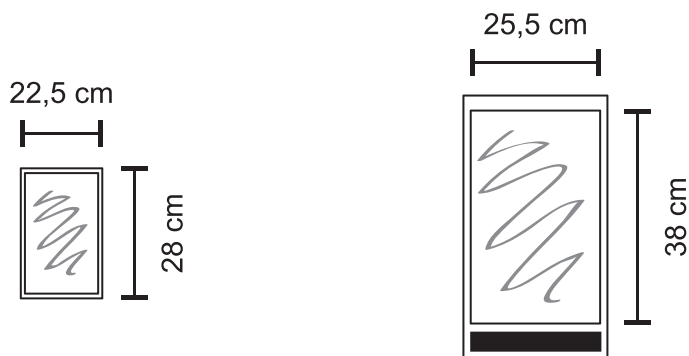

PRESENTAZIONE DELL'APPARECCHIO

Wash & Carry è un lavaggio carrellato con posto di lavoro incorporato per servizio di parrucchiere a domicilio, presso ospedali, ospizio o manifestazioni del settore.

Composto da una struttura in acciaio verniciato completamente carenata con materiale plastico PST goffrato, grandi ruote smontabili per facilitarne il trasporto anche in presenza di gradini e marciapiedi, manico regolabile in altezza, apertura laterale e del piano superiore con incorporato specchio e piano di appoggio. Completo di n°2 taniche da 12 litri ciascuna, pompa, doccia, vaschetta lavatesta, specchio a mano, quadro elettrico con interruttore per accensione/spegnimento pompa, presa 220 volt ed interruttore automatico di protezione.

COME SI PRESENTA

Togliere Wash & Carry dall'imballo, svitare il fermo in fondo al manico, estrarlo, girarlo e rimetterlo nella stessa sede avvitando nuovamente il fermo. Montare le ruote inserendo i perni nelle apposite sedi.



AVVERTENZE

I materiali utilizzati per l'imballaggio come: sacchetti in plastica, polistirolo espanso, cartone ondulato, ecc.. sono riciclabili e non devono essere lasciati alla portata di bambini in quanto fonti di pericolo, inoltre non devono essere dispersi nell'ambiente.



ATTENZIONE

Wash & Carry dovrà essere destinato solo all'uso per il quale è stato espressamente concepito. Ogni altro uso è da considerarsi improprio e quindi pericoloso. Il costruttore non può essere considerato responsabile per eventuali danni derivati da usi impropri, erronei ed irragionevoli.

MODO D'USO

1. Abbassare il manico, sollevare il pianetto del coperchio e levare lo specchio a mano che sarà riposto nell'apposita sede sul retro del coperchio una volta sollevato lo stesso.
2. Estrarre la vaschetta lavatesta ed inserirla nell'apposita sede regolandone l'altezza e l'inclinazione.
3. Estrarre la tanica contenente la pompa aprendo la porta laterale, svitare il tappo e riempirla di acqua calda (attenzione alla temperatura), rimetterla nel suo alloggio dopo aver chiuso bene il tappo.
4. Inserire la spina in una presa di corrente non superiore a 220/230 volt, accendere la pompa mediante l'apposito interruttore posto sul quadro elettrico, estrarre la doccia ed eseguire il lavaggio dei capelli. L'acqua di scarico riempirà l'altra vaschetta.

ATTENZIONE

Spegnere la pompa una volta finito il lavaggio o quando la tanica dell'acqua calda è vuota. La non osservanza di questa norma può causare il danneggiamento della pompa stessa.

Dato il tipo d'uso qualora ci fosse incompatibilità tra la spina e la presa è necessario utilizzare solamente adattatori semplici/multipli e prolunghe conformi alle vigenti norme di sicurezza. Prima di collegare la spina assicurarsi che la rete di alimentazione elettrica non sia superiore a 220/230 volt.

COSA FARE IN CASO DI ?

Se la pompa non funziona controllare che la spina sia bene inserita nella presa e assicurarsi che l'interruttore di sicurezza sia in "ON".

Per qualsiasi altro mal funzionamento è obbligatorio contattare personale specializzato per la riparazione.

PRESENTATION:

Wash and Carry is a mobile washing unit that offers you the same comforts you have in your salon. It is perfect for home to home hairdressing service, ideal for hospitals, care homes and hairdressing shows and events.

FEATURES:

Wash and Carry is endowed with: a varnished steel structure covered by embossed PST, 2 big easy-to-remove wheels that make easy its transport also in case of rough terrain or steps, a height adjustable handle, a lateral door, a multifunctional top with an inbuilt mirror and a shelf, a two 12-liter tanks, a pump, a hand shower, an adjustable backward sink, a hand mirror, switchboard with on/off switch to turn on and off the pump, 220 Volt plug with circuit breaker. Overall dimensions: 44X64X89H.

WARNING NOTES:



Read this manual with care as it contains important information regarding the safety of installation, use and maintenance of the equipment. After removing the packaging, ensure the whole of the equipment is present and undamaged.



The materials used in the packaging, such as plastic bags, expanded polystyrene, corrugated board etc., can be recycled and must not be left within the reach of children for whom they are potentially dangerous, nor must they be disposed of into the environment

CAUTION:

This appliance must only be used for its expressly designed purpose. All other uses shall be deemed improper and consequently hazardous. The manufacturer disclaims liability for any damage or injury caused by improper, wrong and unreasonable use of the appliance. This appliance is not meant to be used by persons (children included) with mental, psychological and sensorial handicaps, or insufficient experience and knowledge. Look after children to prevent them playing with the appliance.

INSTRUCTION FOR USE:

1. Remove Wash and Carry from his package. Lift up the upper top, take the mirror and put it on its specific location on the rear of the top.
2. Grab the sink inside the Wash and Carry and unscrew the control knob under it. Insert the metal tube in its specific location and screw the control knob. Choose the right tilt angle of the sink and fasten it. Assemble the wheels in their position with its pivots.
3. Open the lateral door and pull out the tank with the pump, unscrew the cap and fill up the tank with hot water (pay attention to water temperature). Put back the tank in its location after having screwed the cap.
4. Insert the plug in a socket not higher than 220/230 Volt, turn on the pump switch on the switchboard. Pull out the shower and proceed with the washing. The waste water will fill up the second tank.
5. Once you have finished turn off the pump, unscrew the 2 control knobs, pull out the sink from the metal tube above and put it on the metal tube below. Put the mirror in its former location and close the upper top.

ATTENTION:

Please, pay attention to switch off the pump always once you finish the washing or when the hot water tank is empty otherwise the pump may break.

If the Wash and Carry's plug is not compatible with the socket, have it replaced with a suitable one by a qualified personnel, or use simple or multiple adapters or extension cables that are comply with the regulations in force, paying particular attention not to exceed the electrical current capacity limit marked on the adapter and extension cable and the maximum power indicated on the multiple adapter.

PROBLEM SOLVING:

If the pump doesn't work check the plug is well inserted into the socket and check the safety switch is "ON". For any other malfunctioning contact a qualified person to repair it.